
# Assembly Instruction

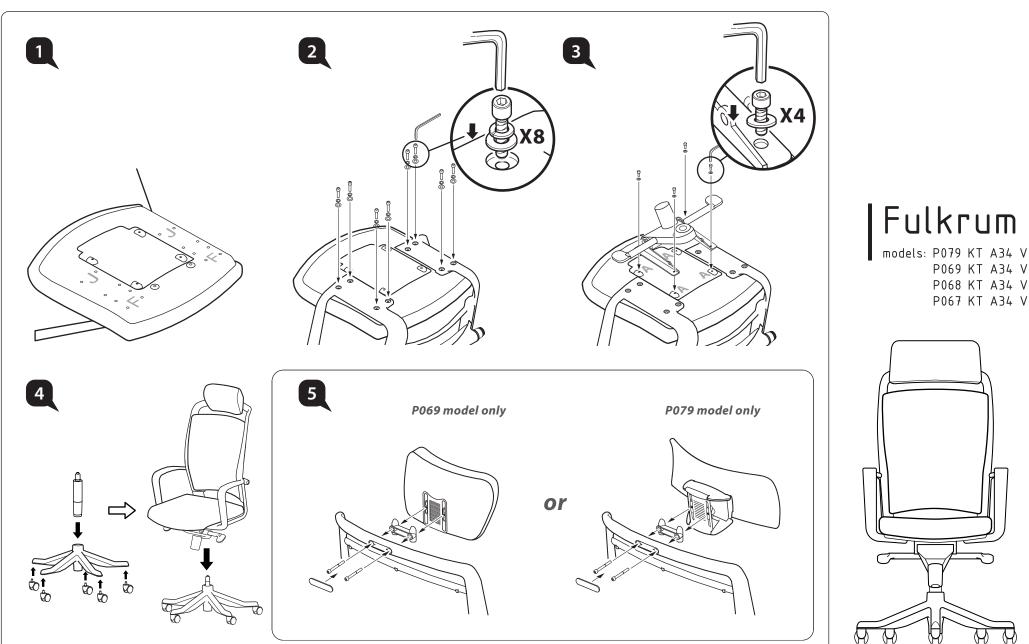



 $(\Box)$ 

# User Instructions

### Seat Height Adjustment

Flip up lever on right-side to raise or lower set. Adjust such that your feet are adequately supported on floor.



D

E

A

### Multi-Position Tilt Lock

Recline to the desired position, and flip down lever on left-side to lock. Flip up lever, and recline backwards to release tilt-lock.

## **C** Tilt Tension Control

Turn bottom knob clockwise to

provide a stronger tilt tension, and vice-versa. Adjust such that minimum effort is required to push back when reclining.

### Adjustable Lumbar Depth

Turn knobs on either side of back-frame to adjust depth of lumbar-support cushion. A slack mesh-back is normal and may be tensioned by adjusting the cushion forwards.

#### Adjustable Headrest Height (P079 and P069 models only)

Hold head-rest by both sides and pull up or push down to the desired height.

# MERRYFAR

# Fulkrum models: P079 KT A34 V P069 KT A34 V P068 KT A34 V P067 KT A34 V

