

Assembly Instruction

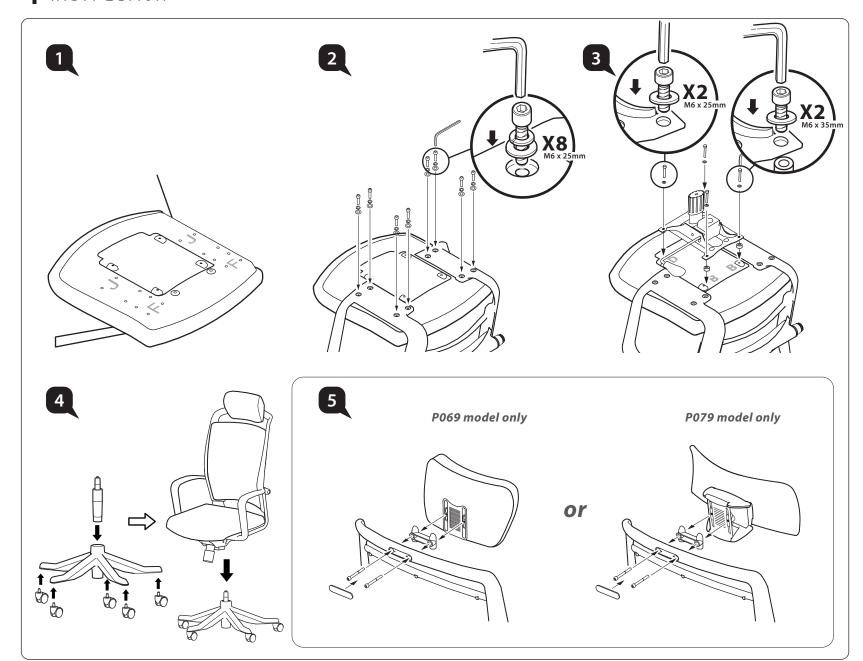



|Fulkrum

models: P079 SH A34 V P069 SH A34 V P068 SH A34 V P067 SH A34 V

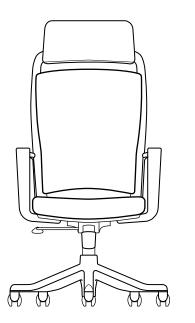

User Instructions



A Seat Height Adjustment

Flip up lever on right-side to raise or lower set. Adjust such that your feet are adequately supported on floor.

B Tilt Lock

There are 2 locking positions. At up right position or recline to maximum, push in lever to lock. Pull out lever to release tilt-lock.

C Tilt Tension Control

Turn bottom knob clockwise to provide a stronger tilt tension, and vice-versa. Adjust such that minimum effort is required to push back when recline.

Adjustable Lumbar Depth

Turn knobs on either side of back-frame to adjust depth of lumbar-support cushion. A slack mesh-back is normal and may be tensioned by adjusting the cushion forwards.

Adjustable Headrest Height (P079 and P069 models only)

Hold head-rest by both sides and pull up or push down to the desired height.

|Fulkrum

models: P079 SH A34 V P069 SH A34 V P068 SH A34 V

P067 SH A34 V

