

Assembly Instruction

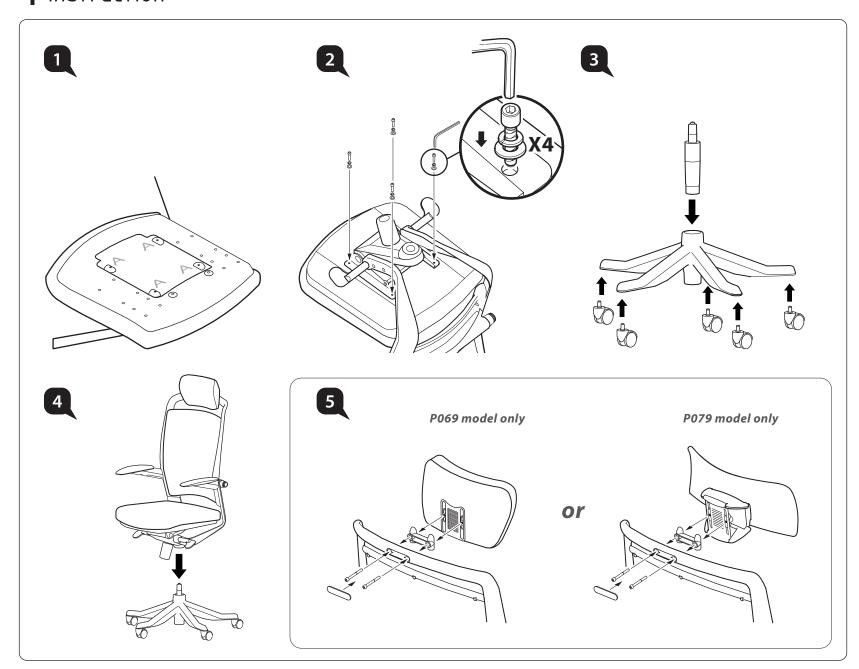



|Fulkrum

models: P079 YF B23 V P069 YF B23 V P068 YF B23 V P067 YF B23 V

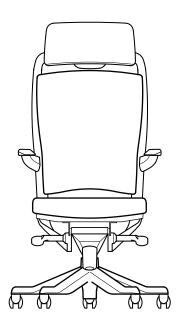

User Instructions



A Seat Height Adjustment

Flip up lever on right-side to raise or lower set. Adjust such that your feet are adequately supported on floor.

B Multi-Position Tilt Lock

Recline to the desired position, and flip down lever on left-side to lock. Flip up lever, and recline backwards to release tilt-lock.

C Tilt Tension Control

Turn bottom knob clockwise to provide a stronger tilt tension, and vice-versa. Adjust such that minimum effort is required to push back when reclining.

Adjustable Lumbar Depth

Turn knobs on either side of back-frame to adjust depth of lumbar-support cushion. A slack mesh-back is normal and may be tensioned by adjusting the cushion forwards.

E Adjustable Arm-pads

Arm-pads can be repositioned to front or back, and swivelled into desired postion.

F Adjustable Headrest Height (P079 and P069 models only)

Hold head-rest by both sides and pull up or push down to the desired height.

Fulkrum

models: P079 YF B23 V

P069 YF B23 V P068 YF B23 V P067 YF B23 V

