
ASSEMBLY INSTRUCTION

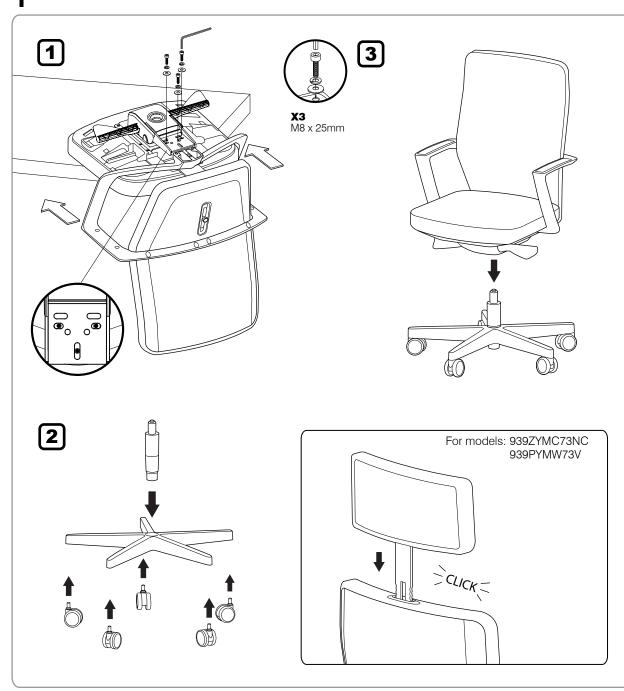

SONOMA



models: 939ZYMC73NC, 939PYMW73V 938ZYMC73NC, 938PYMW73V

USER INSTRUCTIONS

Seat Depth Adjustment Pull the lever under the right-side of the seat to adjust fore and aft position. Headrest Height Adjustment Hold both sides of the headrest and pull up or down to B adjust the height. Available for models 939ZYMC73NC and 939PYMW73V only.

Lumbar Height Adjustment

Slide the knob on the lower back-side up or down for desired lumbar position.

Multi-Position Tilt Lock D

Recline to desired position and flip down lever to lock. Flip up lever to release tilt-lock.

E Seat Height Adjustment Flip up lever on right-side to raise or lower seat. Adjust such that your feet are adequately supported on floor.



