
Assembly Instruction

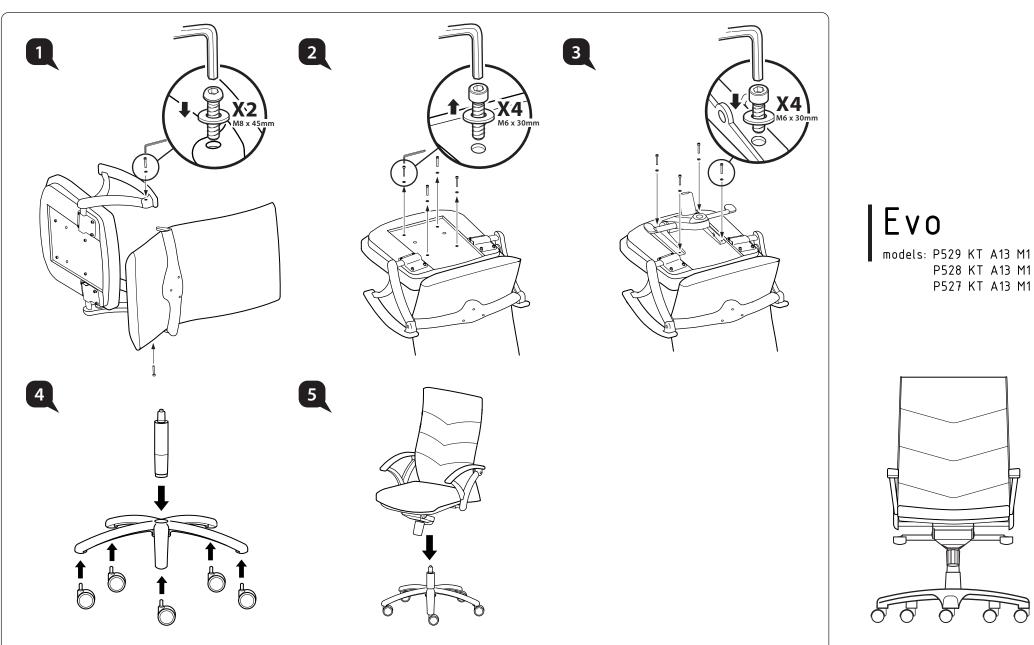



User Instructions

A Seat Height Adjustable

Flip up lever on right-side to raise or lower seat. Adjust such that your feet are adequately supported on floor.

B Multi-Position Tilt Lock

Recline to desired position, and flip down lever on left-side to lock. Flip up lever to release tilt-lock.

C Tilt Tension Control

Turn bottom knob clockwise to provide a stronger tilt tension, and vice-versa. Adjust such that minimum effort is required to push back when recline. **EVO** models: P529 KT A13 M1 P528 KT A13 M1 P527 KT A13 M1

