



Assembly Instruction

1 * Skip this step for model without armrests.

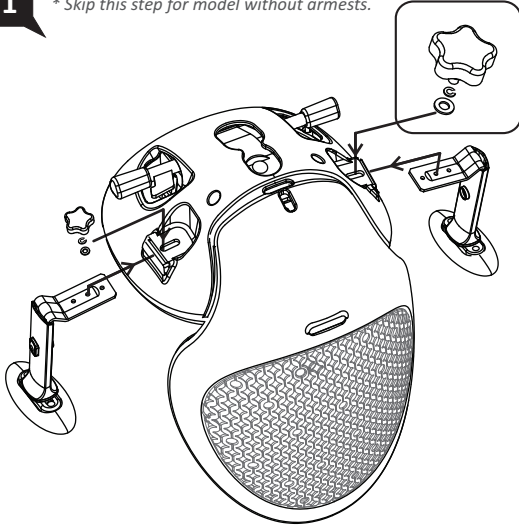

2

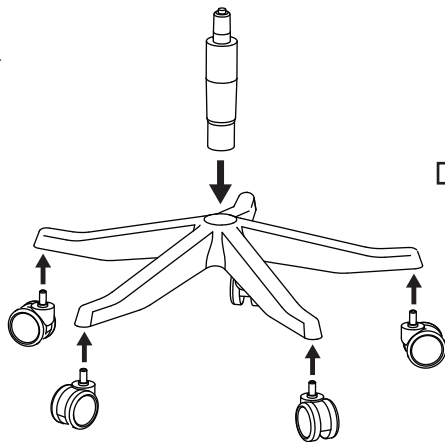

User Instruction

- A Seat Height Adjustable**
Flip up lever on right-side to raise or lower seat. Adjust such that your feet are adequately supported on floor.
- B Multi-Position Tilt Lock**
Recline to desired position, and turn lever on left-side clockwise to lock, and vice-versa to release tilt-lock.
- C Tilt Tension Control**
Turn lever on right-side clockwise to provide a stronger tilt tension, and vice-versa. Adjust such that minimum effort is required to push back when recline.

- D Armrest Height**
Press the button and raise or lower the armrest. Adjust height to adequately support elbows to take strain off shoulder.
- E Armrest Depth**
Grasp armpads and push them forwards or backwards to suit your arm support.
- F Armpad Angle**
Grasp armpads and rotate them inwards or outwards to adjust elbow inward position during keyboard use, while an outward position is recommended during mousing.

OVO

Model : 667_YJ A00 VB
667_YJ A66 VB

