
Assembly Instruction

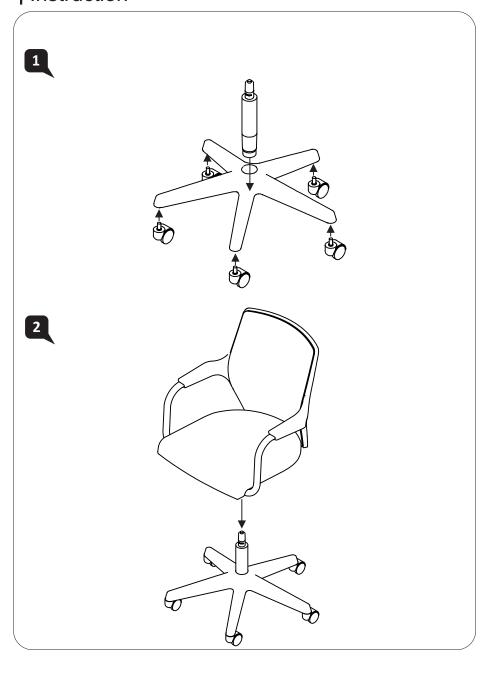

User Instruction

Seat Height Adjustable
Flip up lever on right-side to raise or lower seat. Adjust such that your feet are adequately supported on floor.

Upright Tilt Lock

With chair in upright position, push lever inwards to lock tilting. Pull lever outwards to release tilt-lock.


Tilt Tension Control


Turn bottom knob clockwise to provide a stronger tilt tension, and vice-versa. Adjust such that minimum effort is required to push back when reclining.



Robin

Model: 697 SH A67 N3

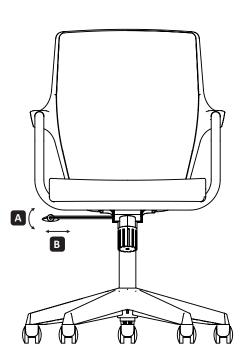

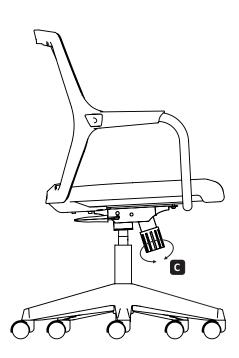



Assembly Instruction





Robin Model : 691 NA A67 H4

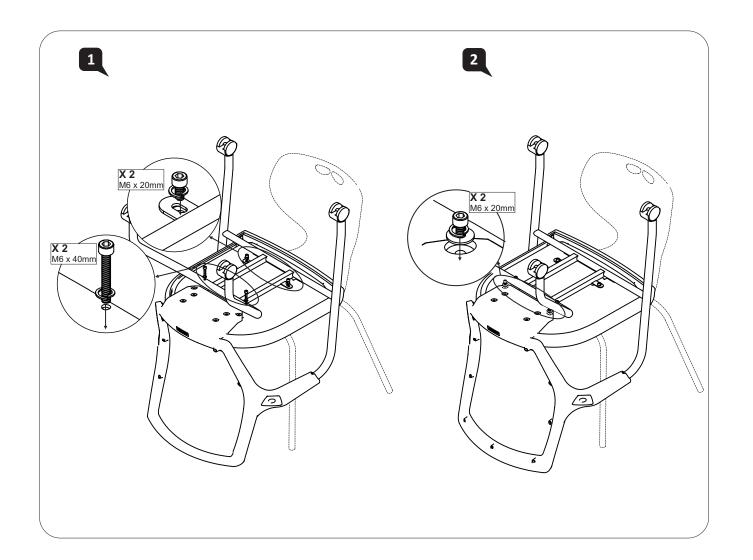

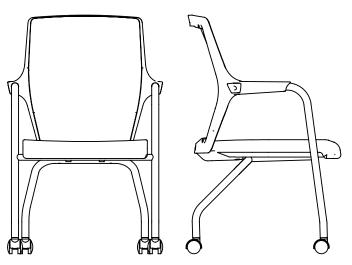

Assembly Instruction





