
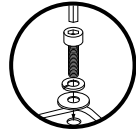



ASSEMBLY
INSTRUCTION

1


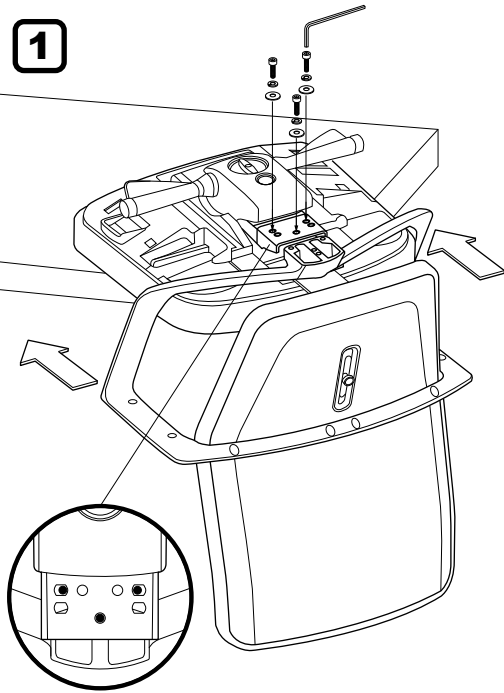


X3
M8 x 25mm

3

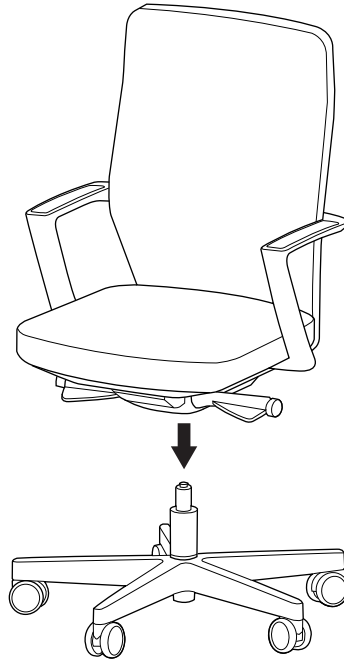

2

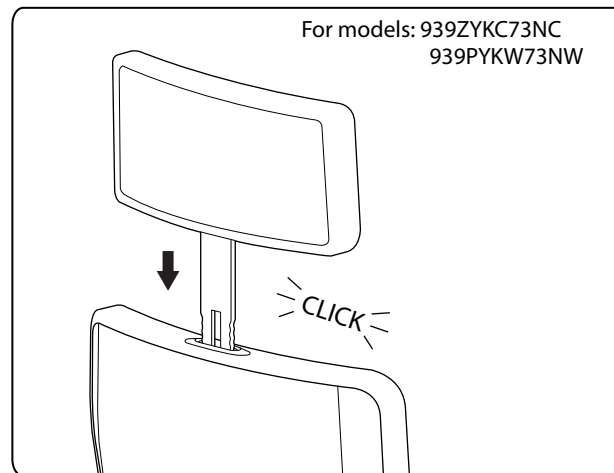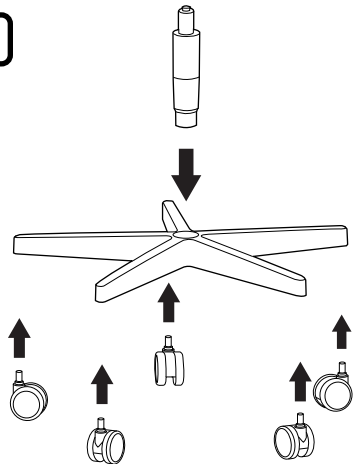

For models: 939ZYKC73NC
939PYKW73NW

SONOMA

models: 939ZYKC73NC, 939PYKW73NW
938ZYKC73NC, 938PYKW73NW

MERRYFAIR®

USER INSTRUCTIONS

- A** Seat Depth Adjustment
Pull the lever under the right-side of the seat to adjust fore and aft position.
- B** Seat Height Adjustment
Flip up lever on right-side to raise or lower seat. Adjust such that your feet are adequately supported on floor.
- C** Headrest Height Adjustment
Hold both sides of the headrest and pull up or down to adjust the height. Available for models 939ZYKC73NC and 939PYKW73NW only.
- D** Lumbar Height Adjustment
Slide the knob on the lower back-side up or down for desired lumbar position.
- E** Recline Free-Range Adjustment
Use the dial located on the lower right-side to adjust free-range from 0° to 20° in 4-steps.

