

User Instructions

MERRYFAIR®

A *Seat Height Adjustable*

Flip up lever on right-side to raise or lower seat. Adjust such that your feet are adequately supported on floor.

B *Multi-Position Tilt Lock*

Recline to desired position, and flip down lever on left-side to lock. Flip up lever to release tilt-lock.

C *Tilt tension Control*

Turn bottom knob clockwise to provide a stronger tilt tension, and vice-versa. Adjust such that minimum effort is required to push back when recline.

D *Backrest Height*

Turn the knob anti-clockwise to loosen the backrest and adjust the backrest so that the backrest curvature follow the curve of your back. Then turn the knob clockwise to tighten the backrest.

Synchron 3

models: P039 YN A18 M1
P038 YN A18 M1
P037 YN A18 M1

