



- Swing steel brackets from bottom of the screen towards the direction with velcro.
- Fix the steel bracket to base with JCBC Screw M6 x 16.
- Repeat above steps on the seat with screen.


- Link seats together with connector provided.

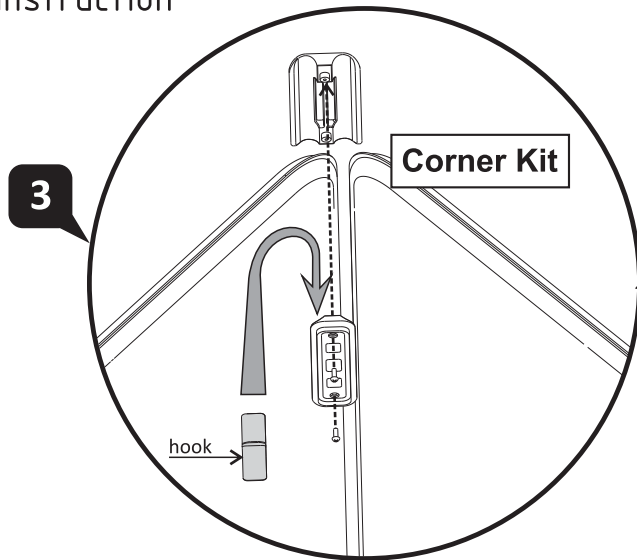



- Fix the kit with CSK Self Tapping Screw #8 x 1" .
- Slot in the hook.

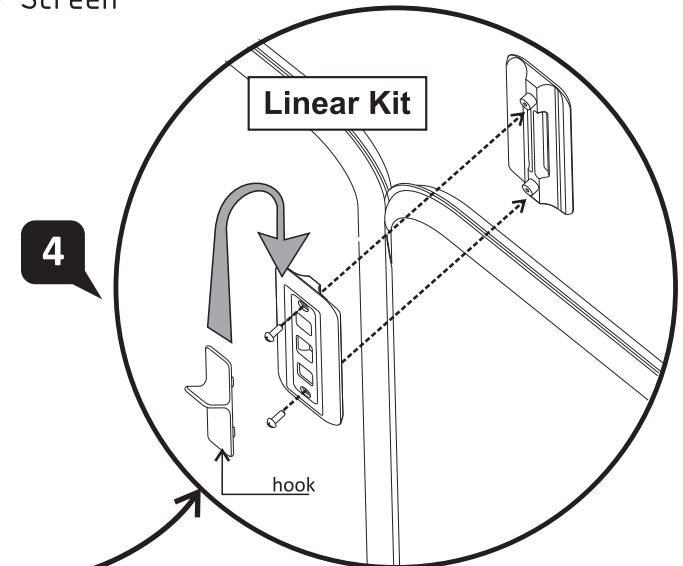

- Fix the kit with CSK Self Tapping Screw #8 x 1" .
- Slot in the hook.

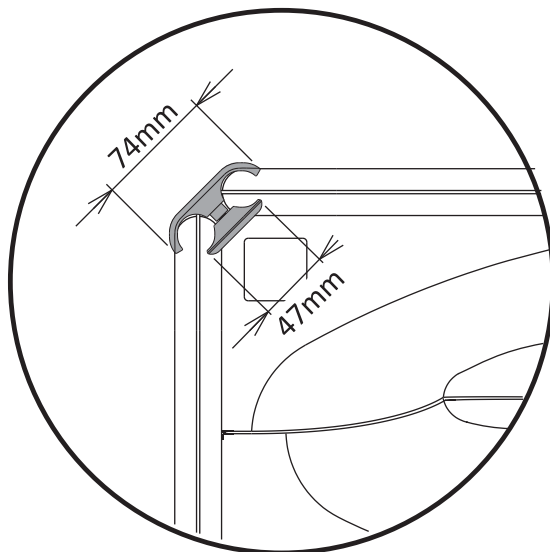

Top View of Corner Kit

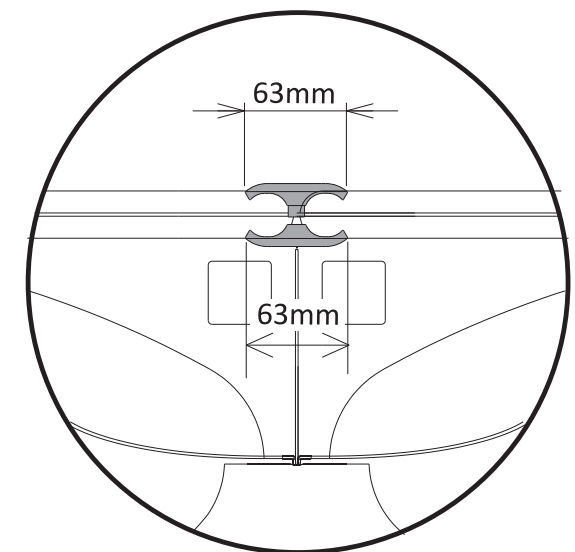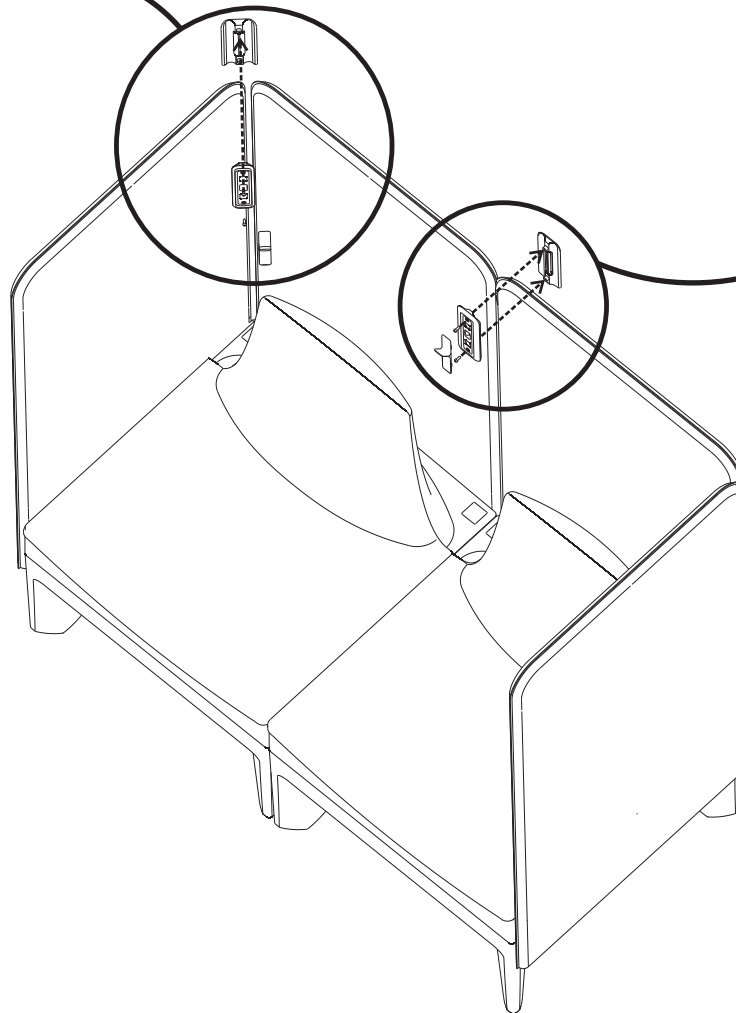

Top View of Linear Kit